


## Inateck Scanner Information:




1.

Enter Setup

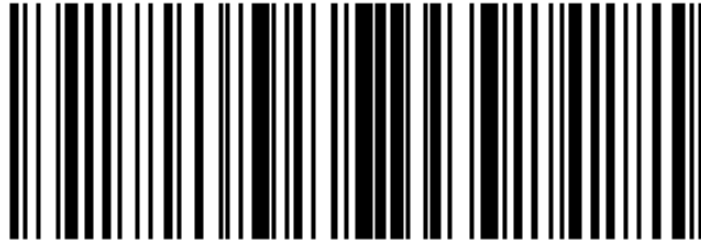

2.

Bluetooth Pairing

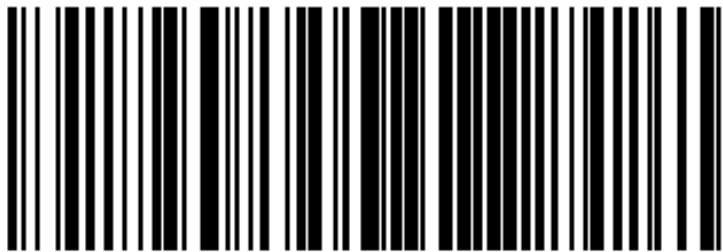

3.

Enable SPP Mode



4.

Exit with Save

## Instructions:

Here is how to pair the Inateck BCST-70 Scanner to your phone and to our apps:

1. Scan Enter setup.
2. Scan Bluetooth Pairing
3. Pair the device to the phone (settings>connections>Bluetooth)
4. If the device you paired looks like “Inateck BCST-70-*model number*-HID” please go to step 5. If it looks like “Inateck BCST-70-*model number*” Please go to step 6.
5. xxx-HID next steps:
  - a. Scan Enter Setup
  - b. Scan Enable SPP Mode
  - c. Scan Exit with Save
  - d. On the phone, a new “Inateck BCST-70-*model number*-SPP” will appear, pair that one.
6. xxx-*model number* next steps:
  - a. Scan Enter Setup
  - b. Scan Enable SPP Mode
  - c. Scan Exit with Save
7. Now open EZRunner, EZRunner tools, or EZQuality and pair the correct scanner
  - a. For Step 5, please choose – SPP.
  - b. For Step 6, please choose the model number.

You should be paired now! If you have any questions about this pairing process, please contact EZSupport via chat bubble on ez.delivery or by phone 419-747-0100.

For Troubleshooting or issues with the scanner, you can reach out to us by the methods above or to the manufacturer. Inateck’s support: [support@inateck.com](mailto:support@inateck.com).